

FyreTorch

“FORM” Instructions

This is not a toy

The FyreTorch “FORM” is intended for use by professionals and, like all fire juggling products, they can be dangerous. The FORM should only be used outdoors and under controlled conditions. Do not attempt to use a lit FORM if you have no previous experience with a conventional Fire Torch / Fire Club.

Fuel Type

The “FORM’s” internal fuel reservoirs extend the life of the wicking. Apart from changing the *external* wicking, your “Form” is maintenance free. It is unnecessary to replace the wicking inside the patented fuel reservoirs. The preferred fuel is lamp oil alternatively paraffin/ kerosene may be used. **Never** use petrol. (Gas).

Conditioning the FORM


Only the wicking end of the FORM should be soaked in fuel. Light using a long taper and allow to burn for about one minute, then extinguish the flame. Refuel and repeat the above instructions several times. This process will improve the performance of your FORM.

Become familiar by juggling your FORM **unlit**.

Create a clear area in which to perform, 20ft (6 metres) is usually adequate.

Should you experience difficulties, stop juggling immediately and walk **away** from the lit FORM Fyretorch (Club).

If unsure about **any** aspect of your new FORM, contact FyreFli Ltd.

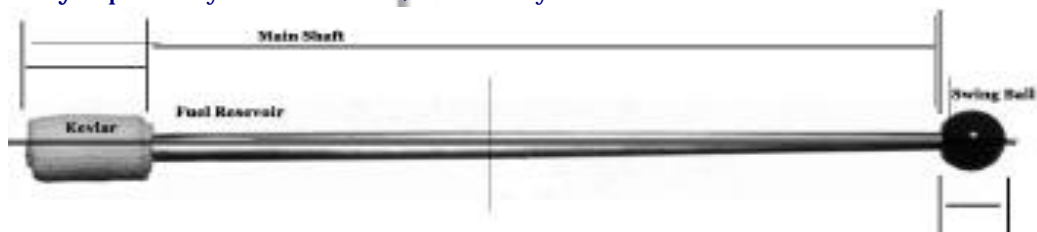

Storage

Ensure the FORM is **cold** and refuelled before storing.

Fyretorch FORM- Wick Replacement

When to replace and fit a wick:

Replace the wick before it appears badly frayed or damaged.

Replace the wick if it appears loose.

Replace the wick if it no longer retains sufficient fuel and burns unevenly.

To replace the wick, simply unscrew the two **retainer** screws from the main shaft and refit with a FyreFli replacement wick.

Replacements are obtainable by visiting the FyreFli website at www.fyrefli.com or fyrefli.co.uk or by writing to FyreFli Ltd.